R672C Water Timer Quick Start

Install Batteries (not included)

- 1. Remove Battery Tray
- 2. Install Batteries (2 AAA Alkaline Type)

Program Timer

- 1. Set *Frequency* [how often] *Hours (or 1 week)*
- 2. Set *Run Time* [how long] *Minutes*

NOTE: Make program dial settings at the hour of the day you want watering to start. The first watering will begin X hours later; where X is the **Frequency** hours.

EXAMPLE 1: To water twice a day for 30 minutes, set **Frequency** to 12 and **Run Time** to 30. First watering will occur 12 hours after the time dials were set.

EXAMPLE 2: To water once a day for 60 minutes, set **Frequency** to 24 and **Run Time** to 60. First watering will occur 24 hours after the time dials were set.

Attach Timer to Outdoor Faucet

- 1. Remove Faucet Adapter
- 2. Attach Adapter to Faucet
- 3. Attach Timer to Adapter
- Connect your drip system
 - Turn water faucet on





Program Timer: EXAMPLE 1



Note: If watering is to start at 8:00 am, then make program settings at the 8:00 pm hour of the day (12 hours prior).

Attach Timer to Faucet

Program Timer: EXAMPLE 2

raindrip



Note: If watering is to start at 5:00 am, then make program settings at the 5:00 am hour of the day (24 hours prior).



Run Time Set to ON

Run Time Set to OFF





Battery Indicator Light



Manual Watering

- 1. To start manual watering, set *Run Time* to ON.
- 2. To stop watering, set Run Time to OFF.
- 3. When done, set *Run Time* to desired setting.

Battery Indicator Light – Green

Good Batteries: No light Weak Batteries: Light on – *Replace Batteries Promptly*